

Rýchly prístup k funkciám na pokladnici Euro-2000TE



!	"	#	\$	%	&	'	<	>	*	+	-	.	/	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?	␣	
21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F	30	31	32	33	34	35	36	37	38	39	3A	3B	3C	3D	3E	3F	40
␣	Ā	á	Ā	ä	Ä	b	B	c	Č	č	d	D	đ	Ď	e	E	é	É	f	F	g	G	h	H	i	I	í	Í	j	J	
61	41	7B	7C	7D	7E	62	42	63	43	7F	80	64	44	81	82	65	45	83	84	66	46	67	47	68	48	69	49	85	86	6A	4A
k	K	l	L	í	Í	ř	Ř	m	M	n	N	ň	Ň	o	O	ó	Ó	ô	Ô	p	P	q	Q	r	R	ř	Ř	š	S	š	Š
6B	4B	6C	4C	87	88	89	8A	6D	4D	6E	4E	8B	8C	6F	4F	8D	8E	8F	90	70	50	71	51	72	52	91	92	73	53	93	94
t	T	ř	Ř	u	U	ú	Ú	v	V	w	W	x	X	y	Y	z	Z	ž	Ž	I	II	III	IV	V	VI	medzera					
74	54	95	96	75	55	97	98	76	56	77	57	78	58	79	59	99	9A	7A	5A	9B	9C	5B	7C	5C	9D	9E	7D	5D	9F	90	20

* Detailný popis funkcií je v manuály dostupnom na www.elcom.eu