


Rýchly prístup k funkciám na pokladniciach Euro-2000T/TX

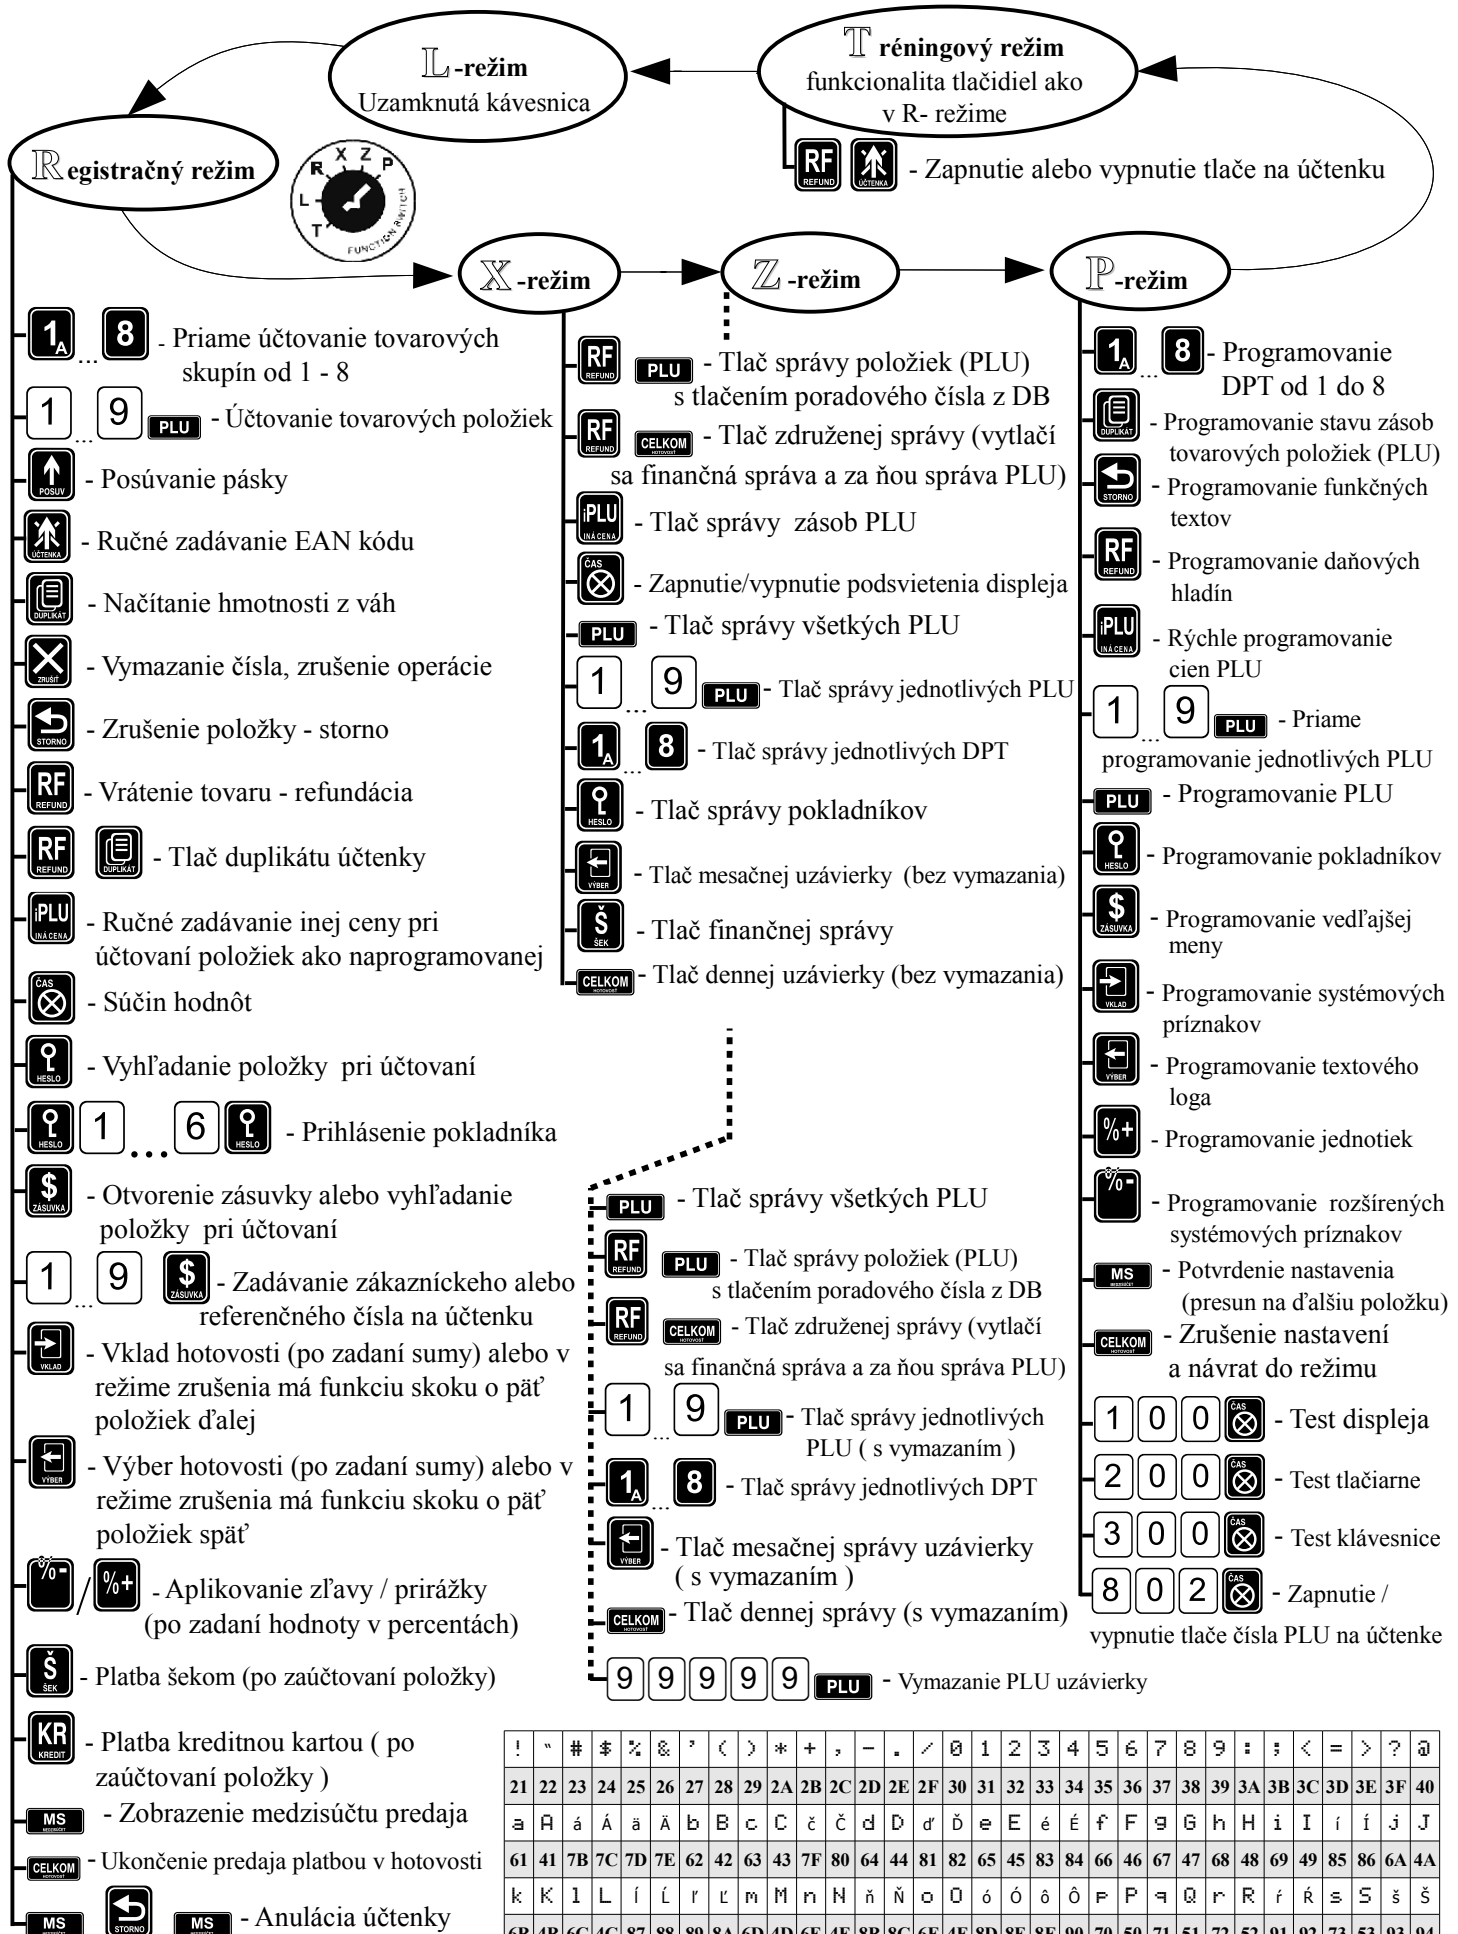

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|----|----|----|---------|----|----|----|
| ! | " | # | \$ | % | & | ' | < | > | * | + | , | - | . | / | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? | @ |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 2A | 2B | 2C | 2D | 2E | 2F | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 3A | 3B | 3C | 3D | 3E | 3F | 40 |
| a | Ä | á | Á | ä | Ä | b | B | c | C | č | Č | d | D | ď | Ď | e | E | é | É | f | F | g | G | h | H | i | I | í | Í | j | J |
| 61 | 41 | 7B | 7C | 7D | 7E | 62 | 42 | 63 | 43 | 7F | 80 | 64 | 44 | 81 | 82 | 65 | 45 | 83 | 84 | 66 | 46 | 67 | 47 | 68 | 48 | 69 | 49 | 85 | 86 | 6A | 4A |
| k | K | l | L | í | Í | ř | ř | l | l | m | M | n | N | ň | Ň | o | O | ó | Ó | ô | Ô | p | P | q | Q | r | R | ř | Ř | š | Š |
| 6B | 4B | 6C | 4C | 87 | 88 | 89 | 8A | 6D | 4D | 6E | 4E | 8B | 8C | 6F | 4F | 8D | 8E | 8F | 90 | 70 | 50 | 71 | 51 | 72 | 52 | 91 | 92 | 73 | 53 | 93 | 94 |
| ť | T | ť | Ť | u | U | ú | Ú | v | V | w | W | x | X | y | Y | ý | Ý | z | Z | ž | Ž | I | II | III | IV | V | VI | medzera | | | |
| 74 | 54 | 95 | 96 | 75 | 55 | 97 | 98 | 76 | 56 | 77 | 57 | 78 | 58 | 79 | 59 | 99 | 9A | 7A | 5A | 9B | 9C | 5B | 5C | 5D | 5E | 5F | 60 | 20 | | | |

* Detailný popis funkcií je v manuály dostupnom na www.elcom.eu